

SHIMALE PELEG

Candles/SunBeam

Assembly instructions

In the box:

The ceiling canopy in a separate box than the glasses



Glove - (in the black box - please use them while installing the canopy to the bracket)




Glasses wrapped each pendant (4 glass) separately

Spare glasses (please keep them in a safe place)




Bulbs with spare



 **Turn off the correct electrical switch ! before you begin the installation !**

1. Start with the ceiling mount.

Please open the box and take the fixture out

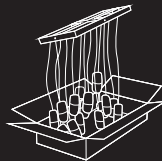

2. Keep the glass on the side

until the canopy is installed to the ceiling .



or



Remove the metal bracket

from the back of the canopy.

3. Prepare screws according to the type of ceiling:


For wood ceilings please use screws for wood.

For drywall ceilings, make sure you put screws where the ceiling joists are and use screws long enough to reach the hard layer on top of the drywall.



For concrete use masonry anchor screws to hold the fixture.


4. **Screw the metal bracket to the ceiling** with the flat side facing up. **The earth wire should come out of your electrical box attach it to the screw on the bracket .**

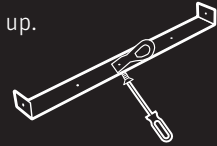

5. For the next stage please use the gloves supplied in the black box, in order to prevent fingerprints on the canopy.

Make sure that the electrical wires are exposed near the bracket.

Lift the main canopy and screw it to the bracket using the existing holes at the edge of the bracket.

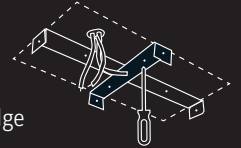


You will need a second person to help you hold the fixture up while you connect the electrical wire to the fixture

In case the ceiling is not 100% flat, the installer should use white or clear silicone to close the gap between the ceiling & the canopy.

If you have the double canopy solution

do the same process with the upper canopy and then with the lower canopy

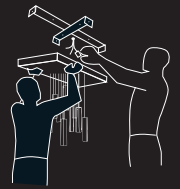

6. **Once the canopy is installed, untie the wires, gently stretch them down** - go few times on each wire. **Insert the bulbs and check they all work.**



7. **Please remove the bubble wrap from the glass carefully one pack at the time.**

Each pack contains 2 wide glasses and 2 narrows = one pendant They should be installed equal against each other. Start with the narrow sides.

[Click to view](#)

8. **After all 4 sides installed** – the pendant is not aligned. Hold the wire about 1" above the pendant and raise the entire unit in folding motion up to 90 degrees. This will prevent the gap between the glasses (if it is not clear please look for the video showing how it is done that was sent to your email) Please don't skip this part

[Click to view](#)

9. Repeat this with all the pendants.

10. If you need to adjust the length, for each wire there is a small plastic screw inside the canopy, turn it gently to release the wire, after adjusting close it again. Please be very gentle not to break it.

ENJOY!