

**Please read instructions before installation**

**In the box:** Find the spare parts inside a foam bag please make sure to find it before throwing away the box (glasses, screws, bulb & socket).


**Gloves:** (inside the black box) please use them while installing the ceiling plate to prevent fingerprints.

**USA:** This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


**CANADA:** ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que les risques inhérents.

 **Must be installed by a professional electrician!**  **Turn off correct electrical switch before installation.**

1. Please open the box and take the fixture out leaving the glasses wrapped.

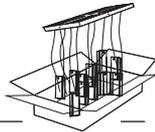

2. Remove the metal bracket from the back of the canopy.

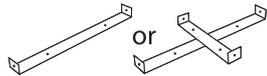


3. Prepare screws according to the type of ceiling:  
For wood ceilings - please use screws for wood.  
For drywall ceilings - make sure you put screws where the ceiling joists are and use screws long enough to reach the hard layer on top of the drywall.  
For concrete - use masonry anchor screws to hold the fixture.



4. Screw the metal bracket to the ceiling with the flat side facing up.


5. If your ceiling has a slope – make sure you see the tape: 'Lower side' / 'Highest side' – and install accordingly.

6. For the next stage please use the loves supplied in the black box, in order to prevent fingerprints on the canopy. Make sure that the electrical wires are exposed near the bracket. Lift the main canopy and screw it to the bracket using the existing holes at the edge of the bracket. You will need a second person to help you hold the fixture up while you connect the electrical wire to the fixture.

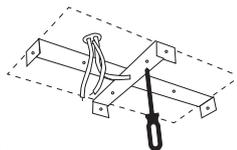


7. Connect the positive and negative wires coming out from your electrical box to the corresponding terminals on the LED driver.

8. Connect the grounding wire coming out from your electrical box (the GND) to the grounding terminal on the LED driver.

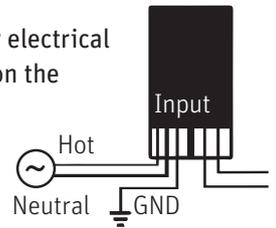

In case the ceiling is not 100% flat, the installer should use white or clear silicone to close the gap between the ceiling and the canopy.

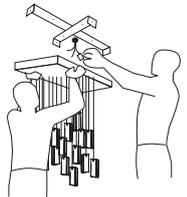

If you have the double canopy solution do the same process with the upper canopy and then with the lower canopy.

9. Once the canopy is installed, untie the wires, gently stretch them down - go few times on each wire.

10. Please remove the wrap from the glasses.

11. If you need to adjust the length, each cord is being held by a 'naked terminal'. Use a plier to gently open it, adjust the length and then gently press it again to hold the cord. Please be very gentle not to break it.